

# HOME

DECORATORS  
COLLECTION


## HAWTHORNE EIGHT-DRAWER DRESSER 40.5"Hx59"W

SKU# 2049100120R (DARK CHERRY)

SKU# 2049100550R (OAK)

SKU# 2049100410R (WHITE)

SKU# 2049100210 (BLACK)

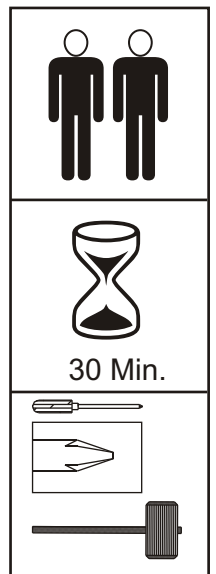


BEFORE BEGINNING ASSEMBLY, CHECK TO MAKE SURE ALL  
PARTS AND HARDWARE ARE ACCOUNTED FOR.













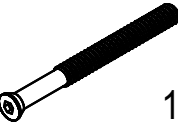

IT IS SUGGESTED THAT YOU SAVE THE CARTON AND PACKING  
MATERIAL UNTIL AFTER ASSEMBLY IS COMPLETED. SELECT A CLEAN,  
SMOOTH SURFACE TO WORK (SUCH AS CARPET).  
THEN, FOLLOW THE EASY STEPS BELOW.

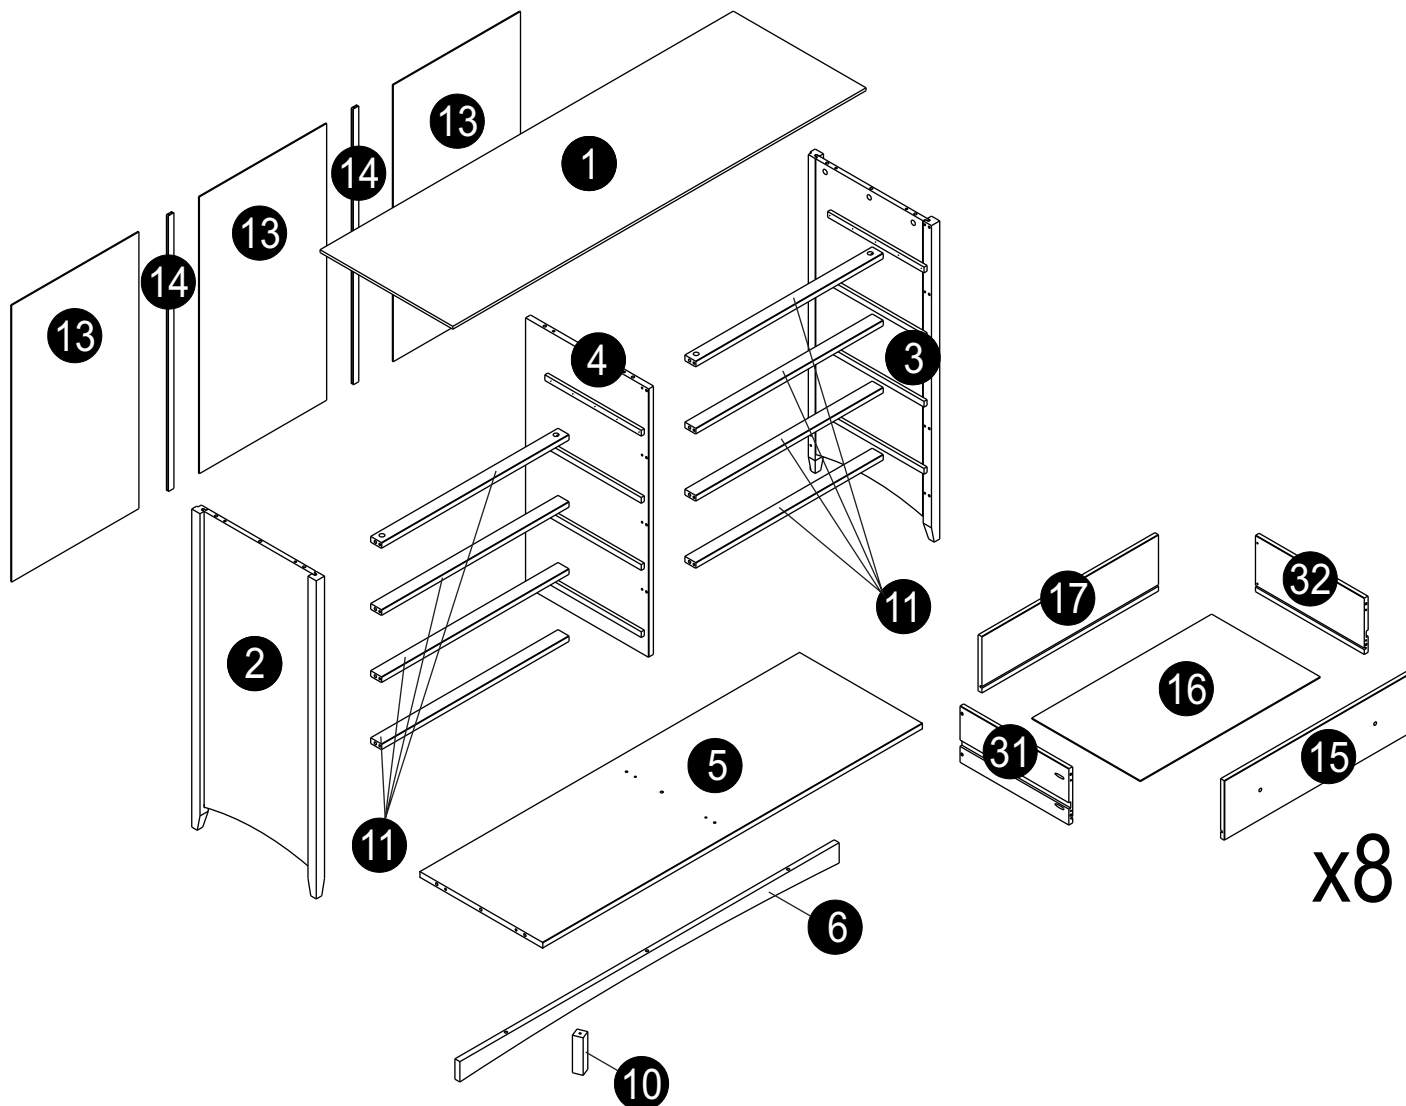
IF PARTS ARE MISSING, PLEASE CALL 1-800-998-7021 FOR INFORMATION.

MADE IN BRAZIL  
16 02 08 2



Part#	Qty	Description	Sizes (w x d x h)
1	1	Top	59 1/16" X 19" X 11/16"
2	1	Left Side	31 1/16" X 17 13/16" X 1 5/8"
3	1	Right Side	31 1/16" X 17 13/16" X 1 5/8"
4	1	Divider	24 15/16" X 17 5/8" X 1 9/16"
5	1	Bottom Panel	54 1/4" X 17 9/16" X 11/16"
6	1	Front Rail	54 3/16" X 2 1/2" X 11/16"
10	1	Central Foot	4 5/8" X 1 3/16" X 1 3/16"
11	6	Rail	26 3/4" X 1 9/16" X 11/16"
13	3	Back Panel	25 15/16" X 18 3/16" X 1/8"
14	2	Panel Connector	25 13/16" X 13/16" X 1/4"
15	6	Drawer Front	26 5/8" X 7 3/8" X 9/16"
16	6	Drawer Bottom	25 11/16" X 15 1/2" X 1/8"
17	6	Drawer Back	25 1/4" X 6 15/16" X 9/16"
31	6	Left Drawer Side	15 9/16" X 6 15/16" X 9/16"
32	6	Right Drawer Side	15 9/16" X 6 15/16" X 9/16"

A	 1/4" x 1 3/16"	60
B		34
C		34
D	 1/8" x 1 3/16"	64
E	 1/16" x 7/8"	28
F		16
G	 1/8" x 1 3/16"	16
H		16
I	 1/8" x 5/8"	16
J		1
K		1
L	 3/16" x 1 9/16"	2
M	 1/4" x 1 15/16"	1
N		1












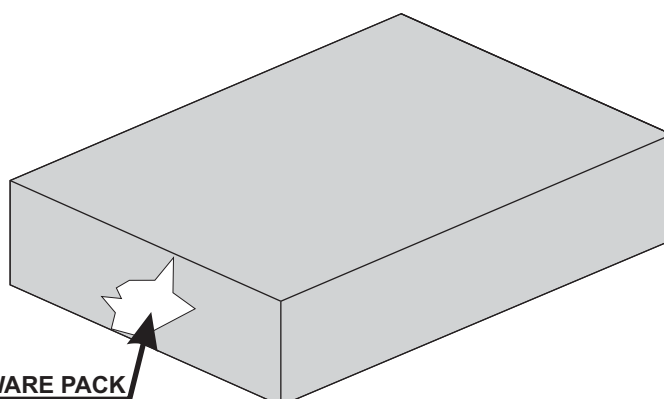


**HARDWARE PACK**

# STEP 1




1. Prepare for future assembly by:

- \* Insert wood dowels (A) into all drawer sides (31) & (32)
- \* Insert wood dowels (A) into the side parts (2) & (3)
- \* Insert wood dowels (A) into the divider (4)
- \* Insert wood dowels (A) into the bottom panel (5)
- \* screw mini-fix pins (B) into the top panel (1)
- \* screw mini-fix pins (B) into the divider (4)
- \* screw mini-fix pins (B) into the side parts (2) & (3)
- \* screw mini-fix pins (B) into the bottom panel (5)

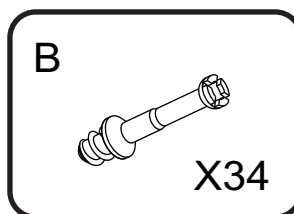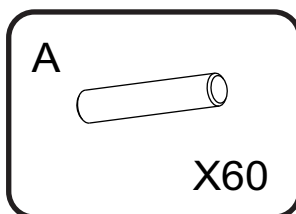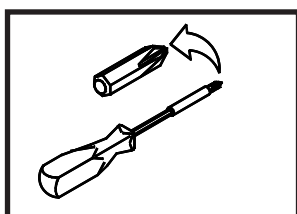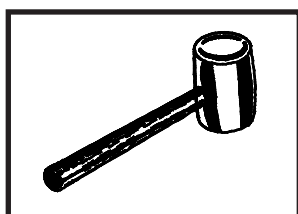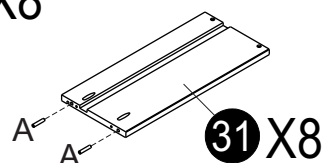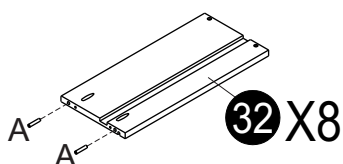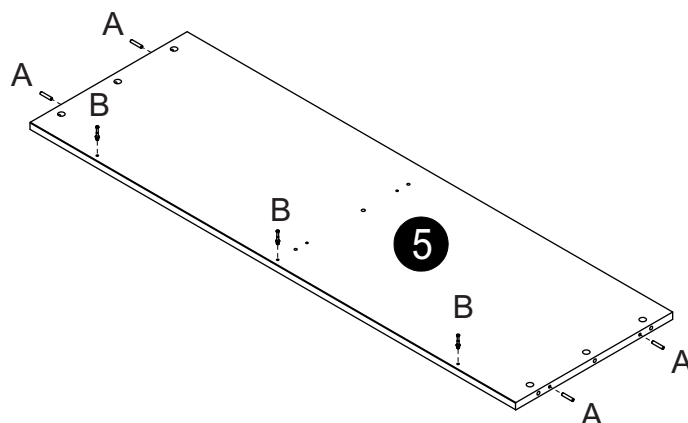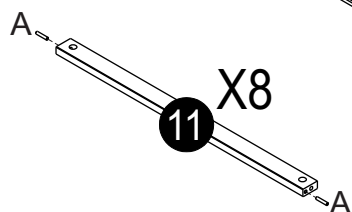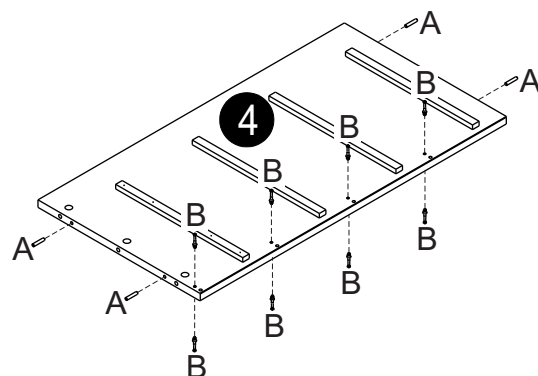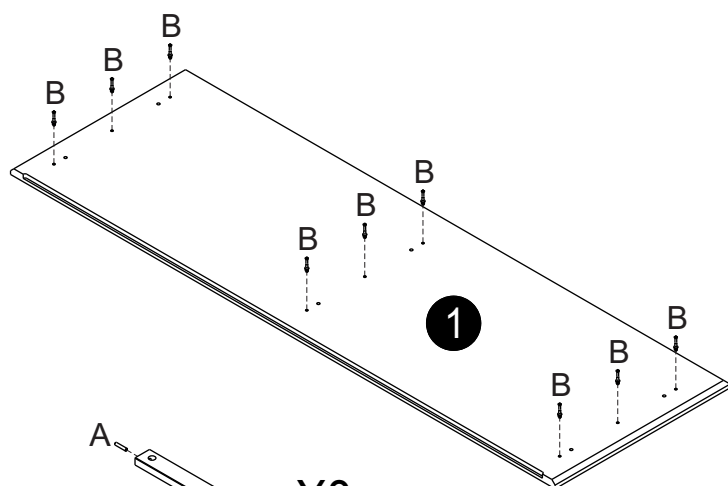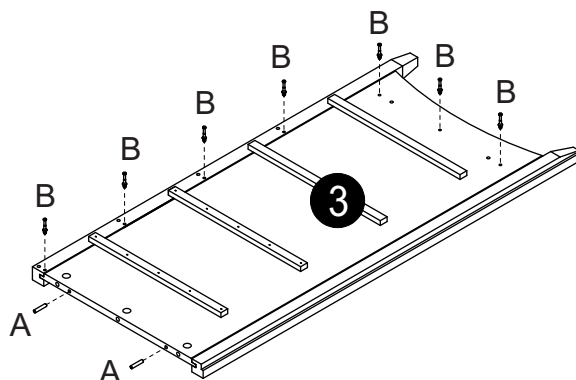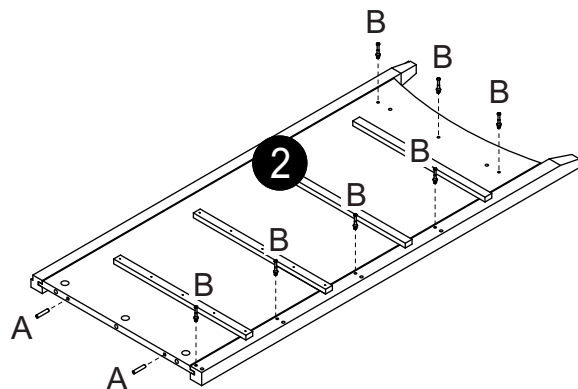


## STEP 2


2. Attach the plastic plug (J) to central foot (10) then screw the adjustable foot (K) into the plastic plug.

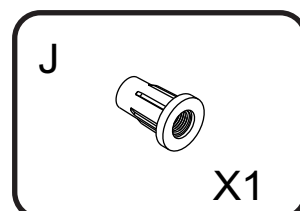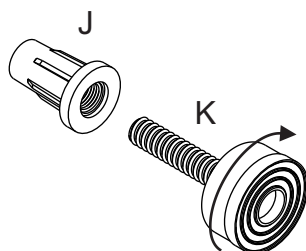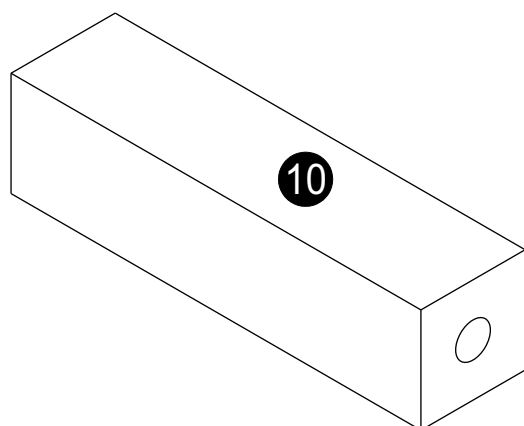

X1



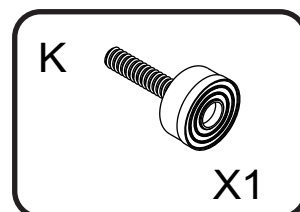


X1

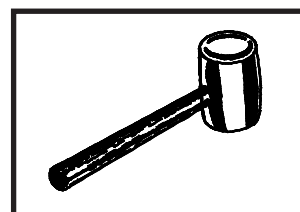


## STEP 3

3. Using the holes as guide, attach the central foot (10) to bottom panel (5) and secure using screw (M) and allen key (N) as shown.

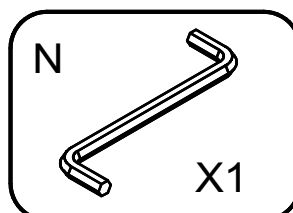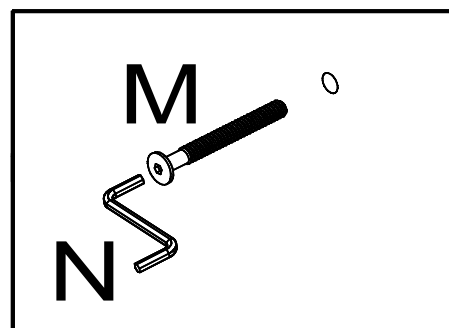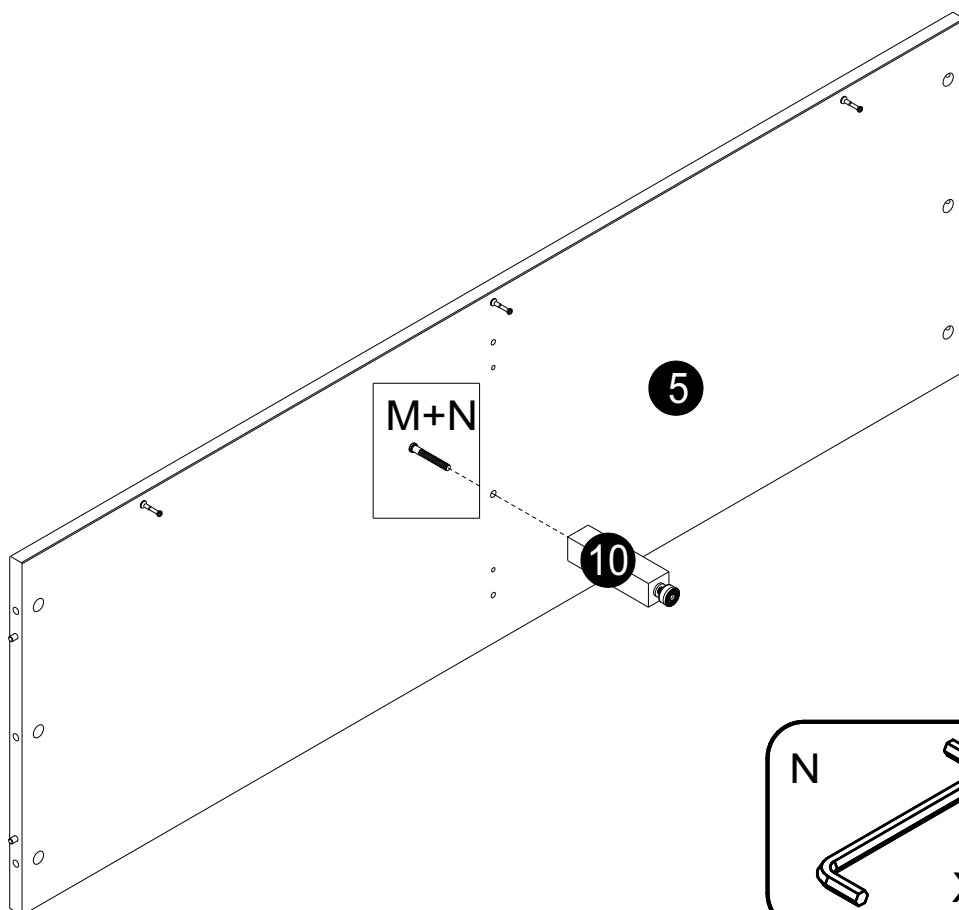




X1

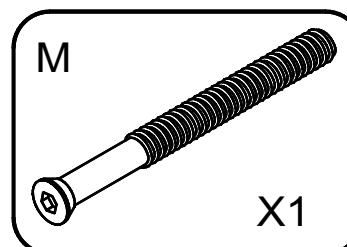

X1





## STEP 4

4. Using the dowels and mini-fix pins previously attached in step 1 as guide, assemble the rails (11) to divider (4) as shown. Secure the rails to the divider using mini-fix drums (C) in a clockwise motion as shown:

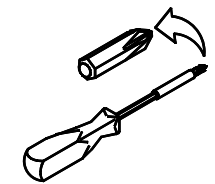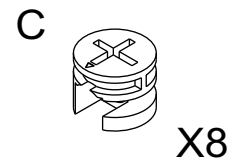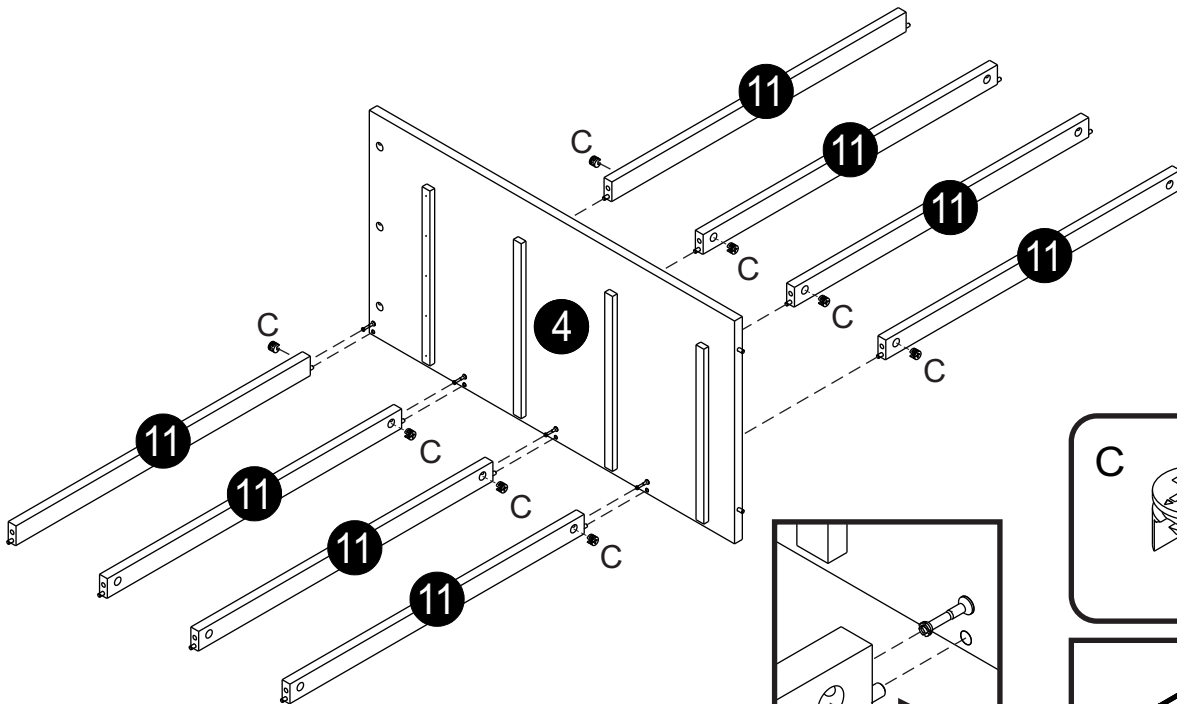





## STEP 05

5. Using the dowels and mini-fix pins previously attached in step 1 as guide, assemble the bottom panel (5) to side (2) and divider (4) as shown. Next align and attach the side (3) making sure all dowels and holes are matched up. Secure the rails and panel to the sides using mini-fix drums (C) and screws (L) in a clockwise motion as shown:

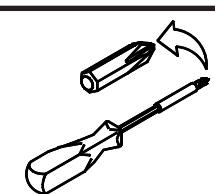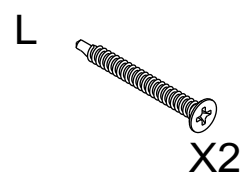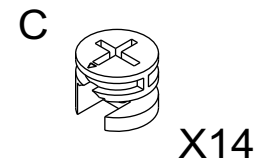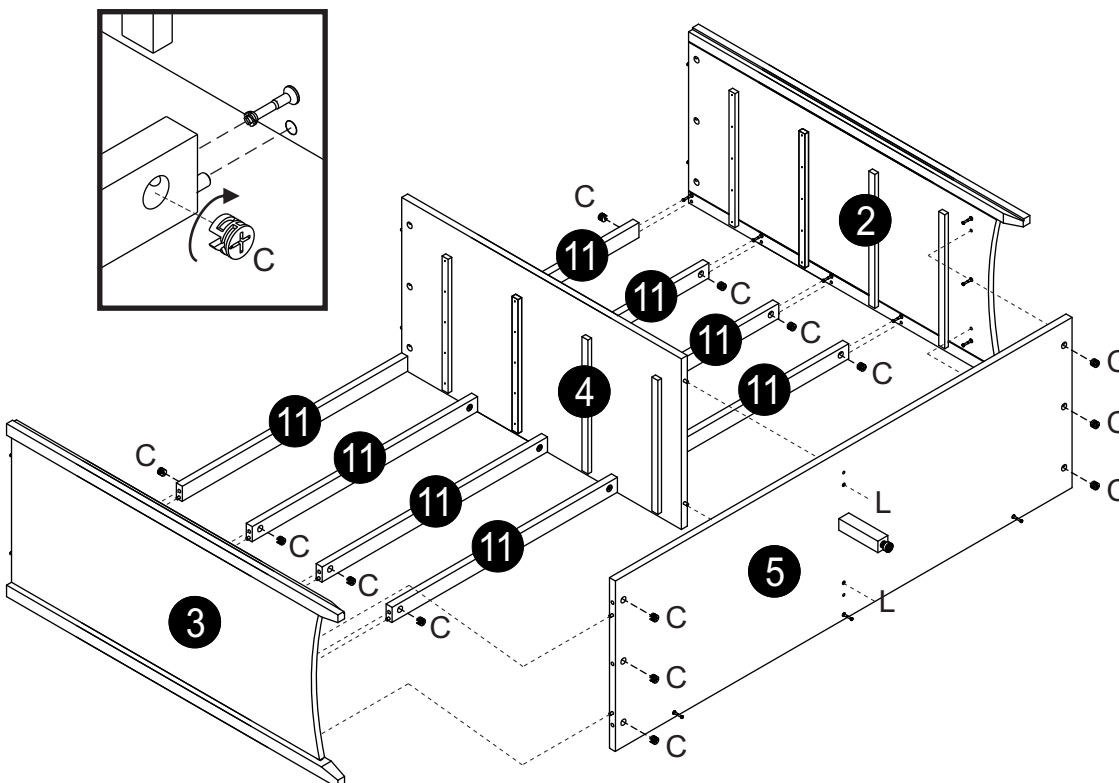




## STEP 6

6. Attach the front rail (6) to the bottom rail (5) using the mini-fix pins as guides, secure using mini-fix drums (C) as shown.

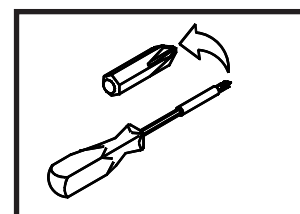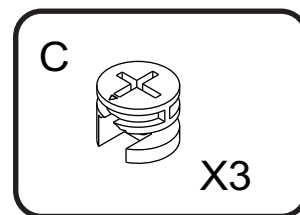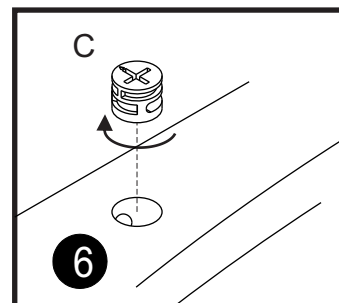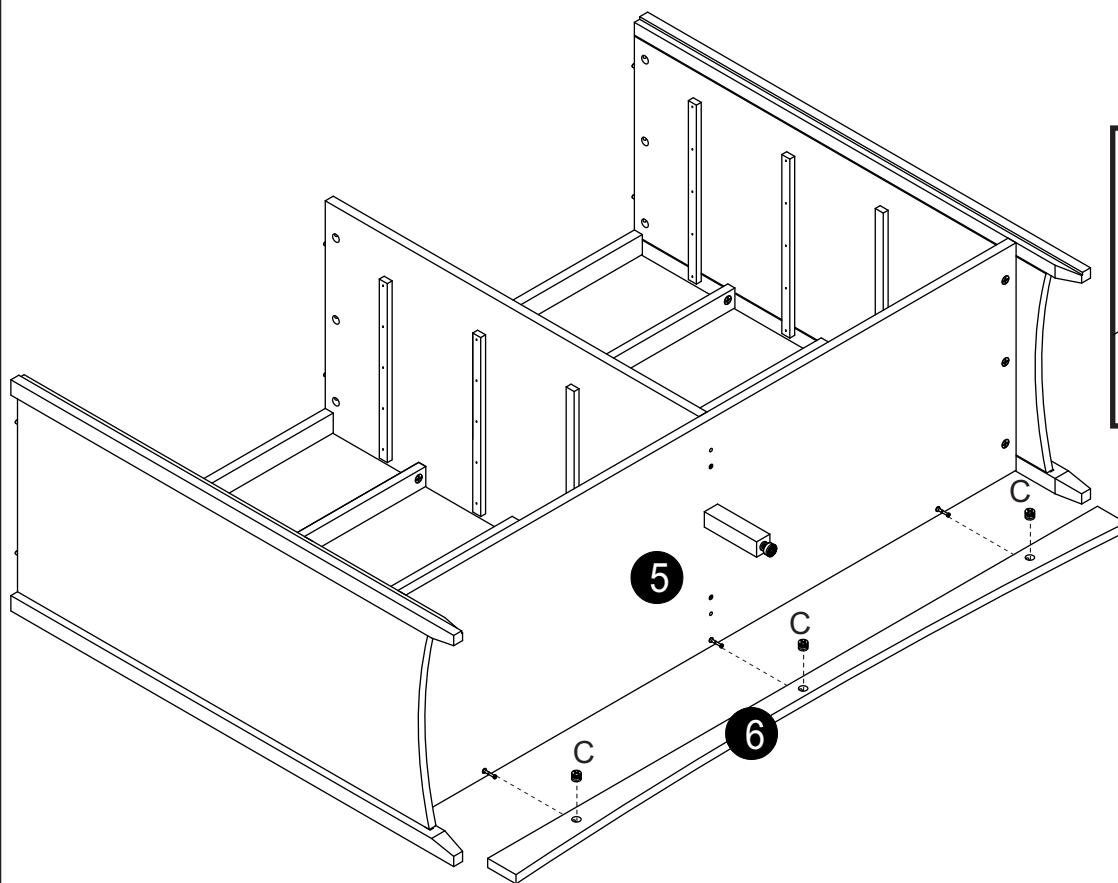


## STEP 7

7. Attach the top panel (1) and secure using mini-fix drums (C) as shown.

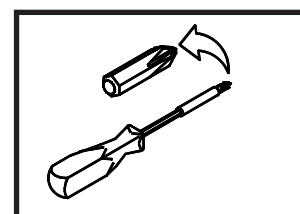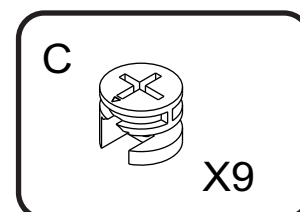
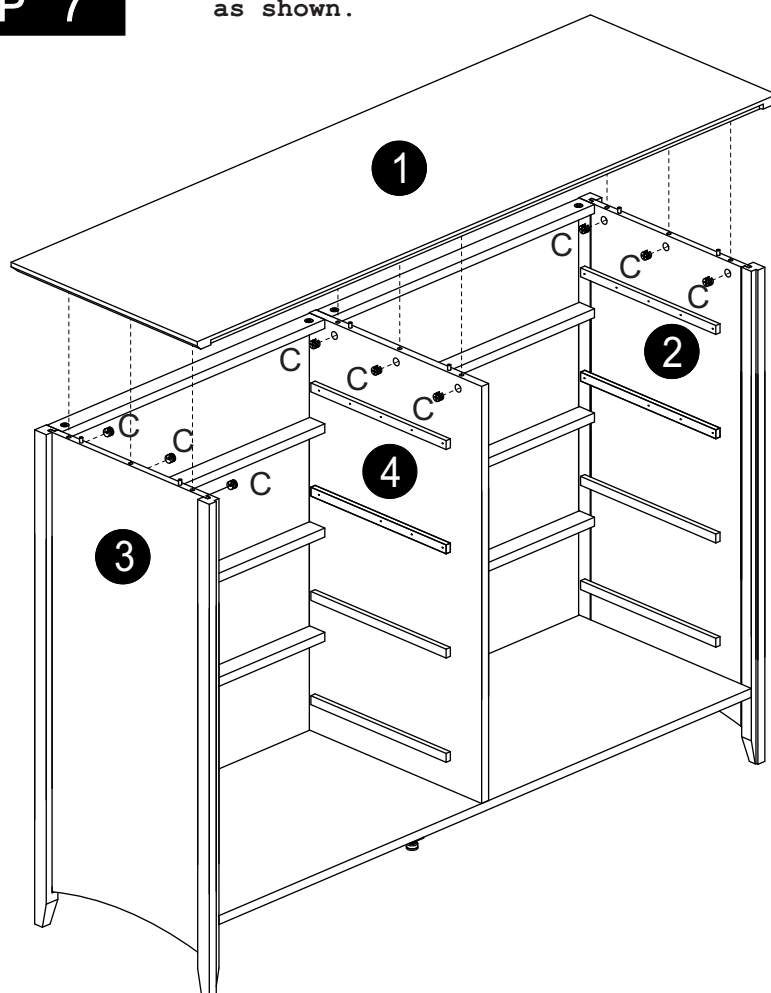


## STEP 8

8. Using dowels as your guide, align and attach a left (31) and a right (32) drawer side to a drawer front (15) as shown. Secure using screws (D) as show.

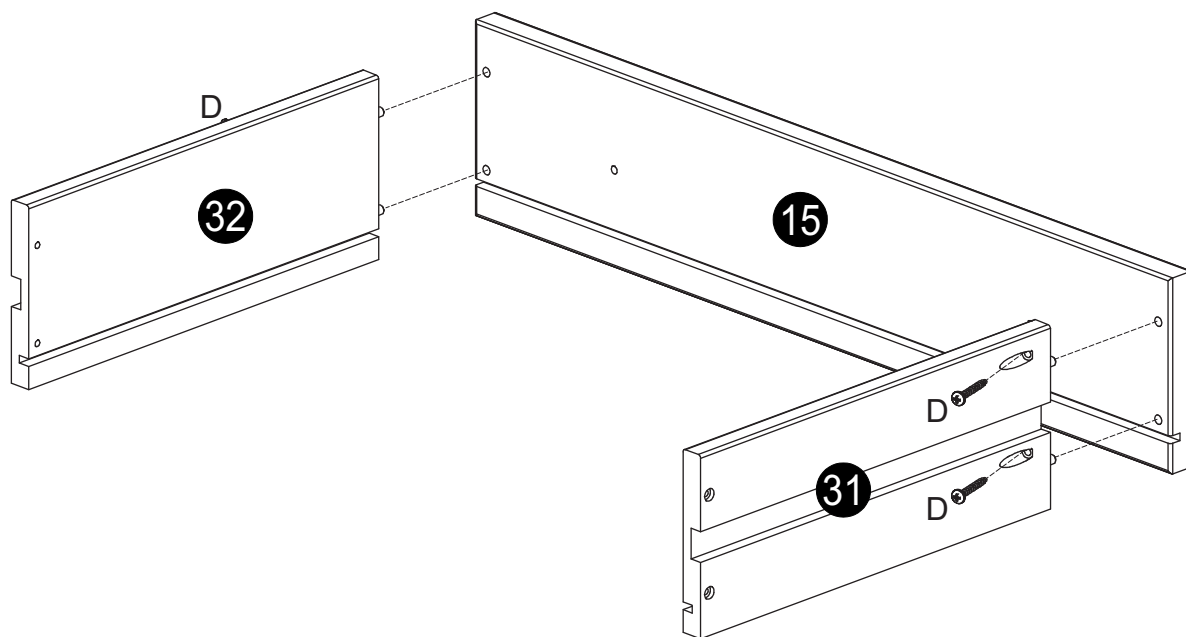


x8

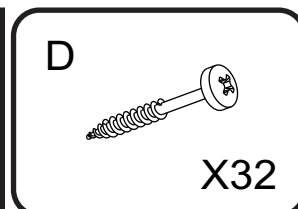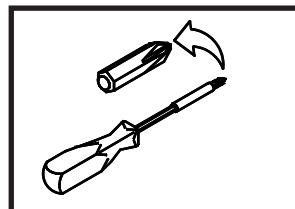

## STEP 9

11. Slide in the drawer bottom (16) as shown.

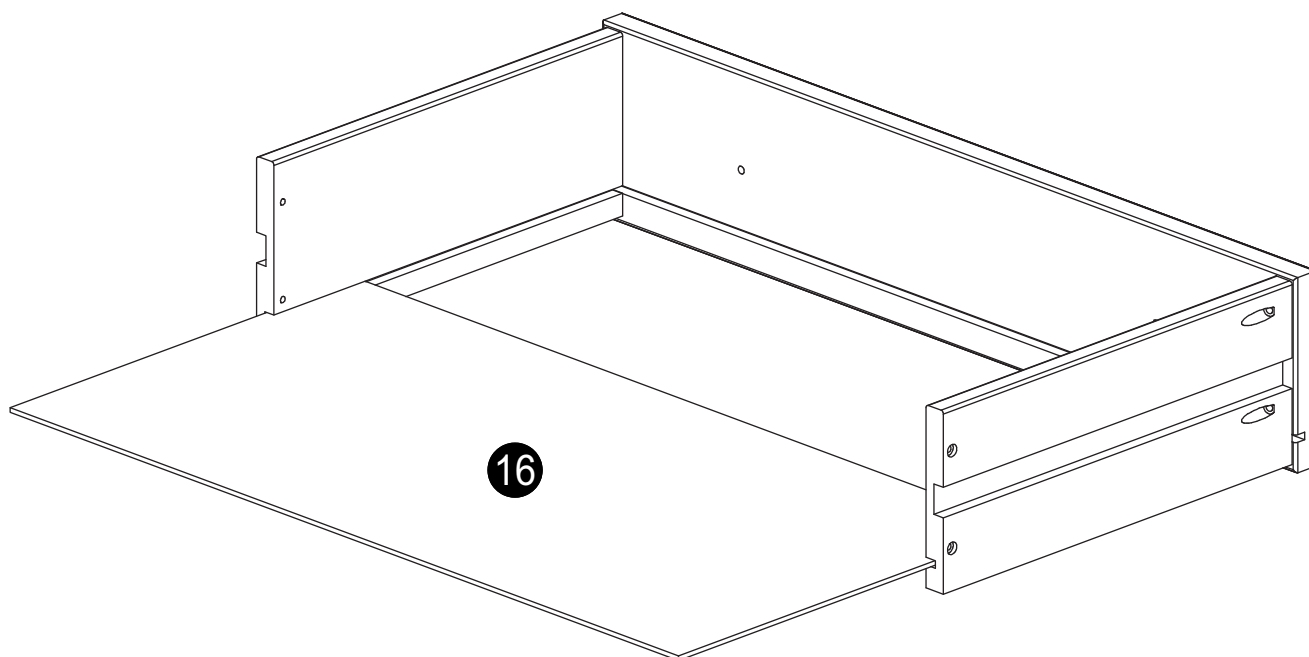


x8





## STEP 10

12. Align and attach the drawer back (17) as shown, secure using screws (D) .

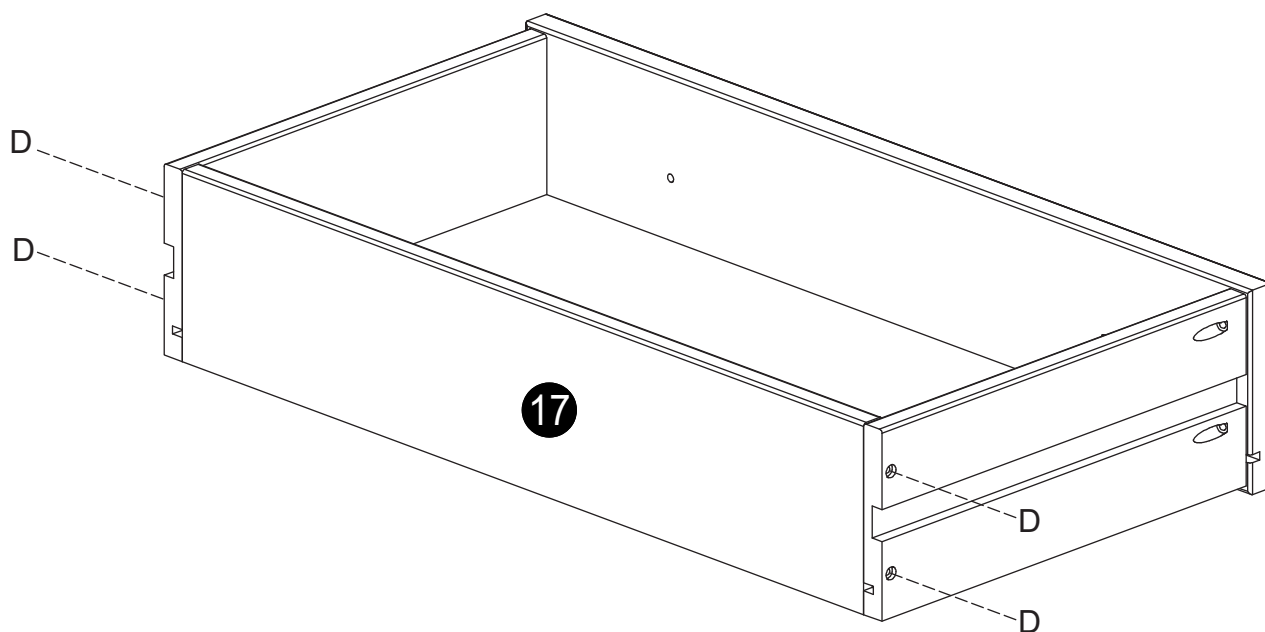


x8





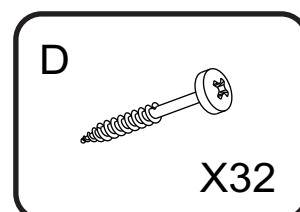
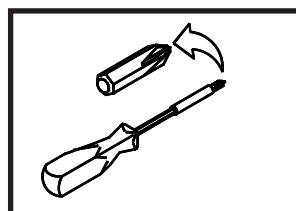


## STEP 11

11. Attach the drawer knobs (F) to the drawer front (15) using screws (G) as shown. Then, attach the plastic drawer stop (H) to the drawer back using screw (I) as shown.


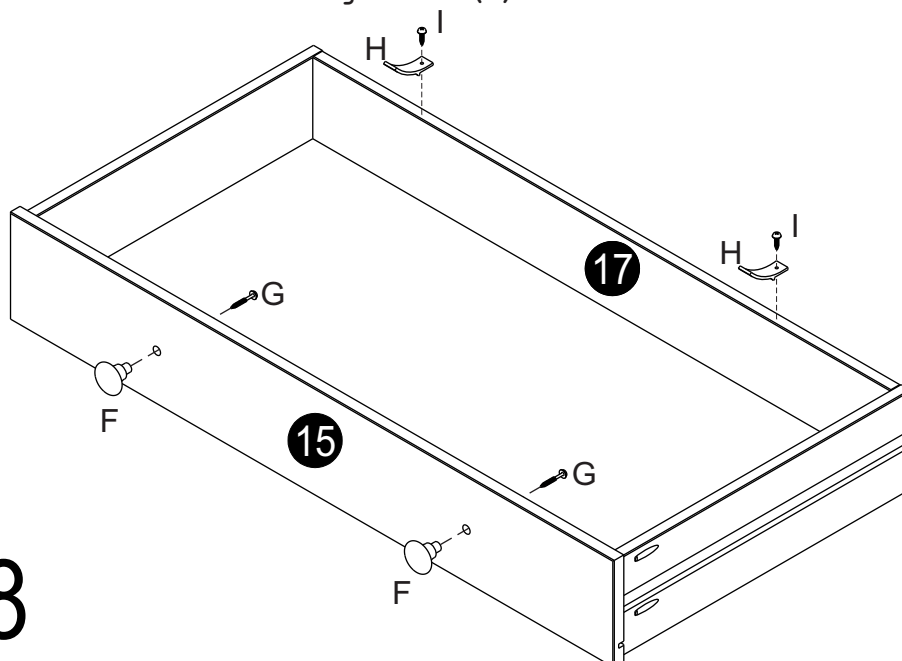


x8

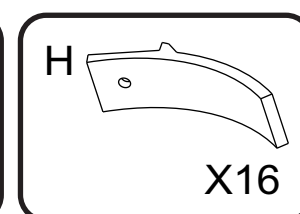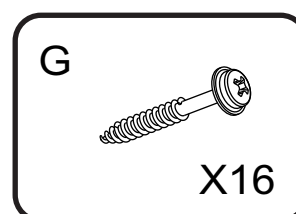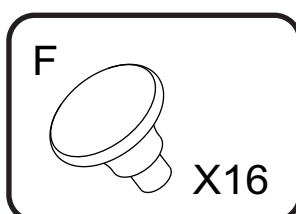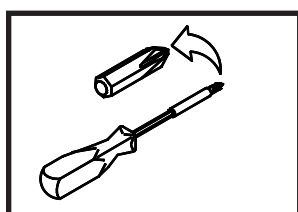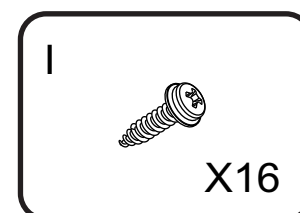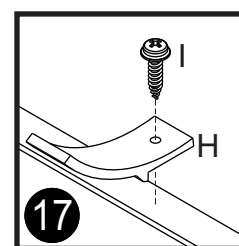





## STEP 12

12. Slide in the drawers. To remove the drawer you must press down the drawer stop as shown.

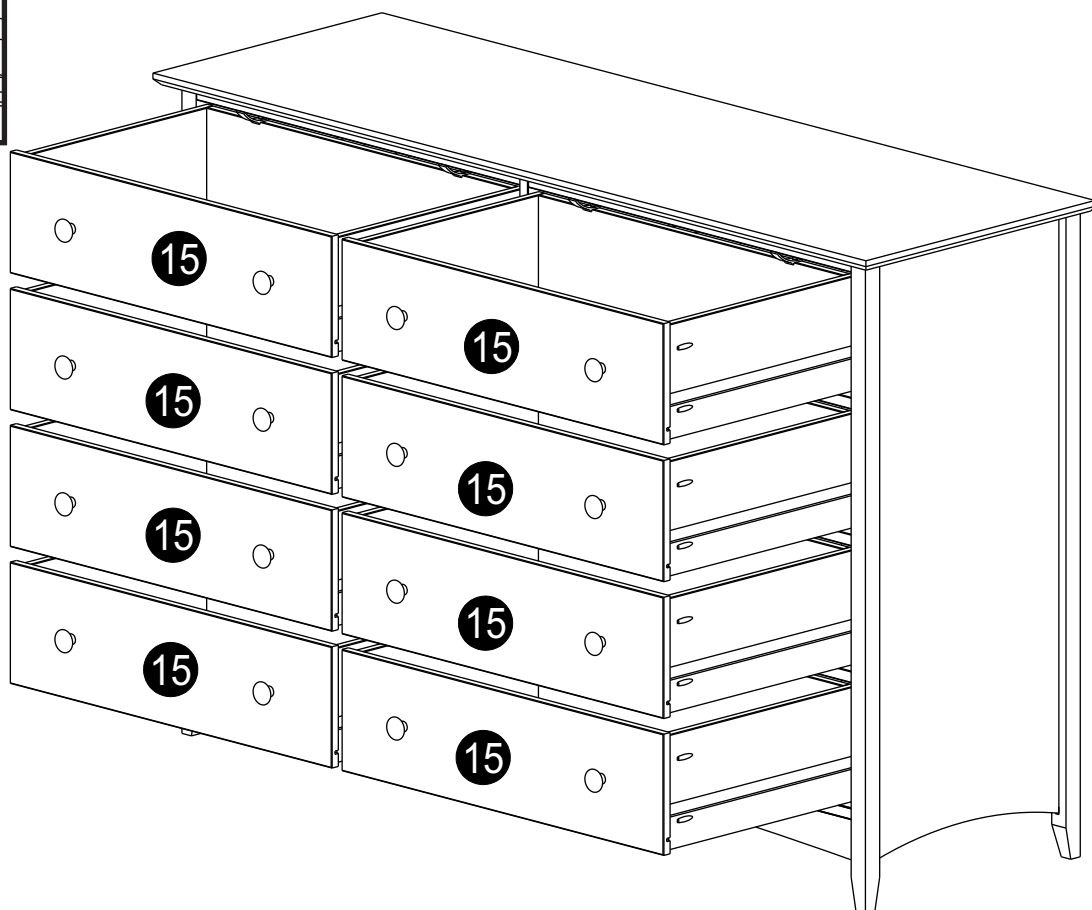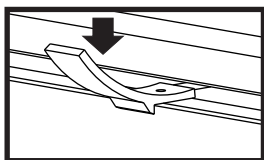

## STEP 13






13. Complete the assembly of your chest by nailing the back panel (13) using nails (E).

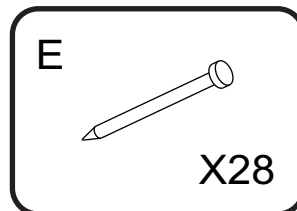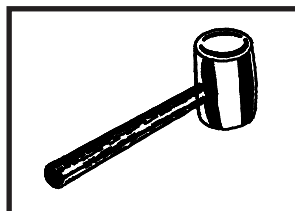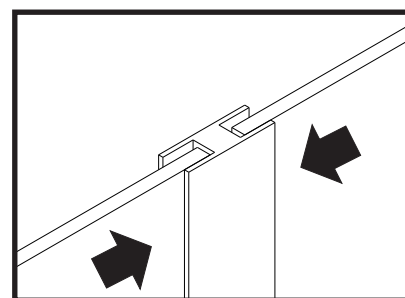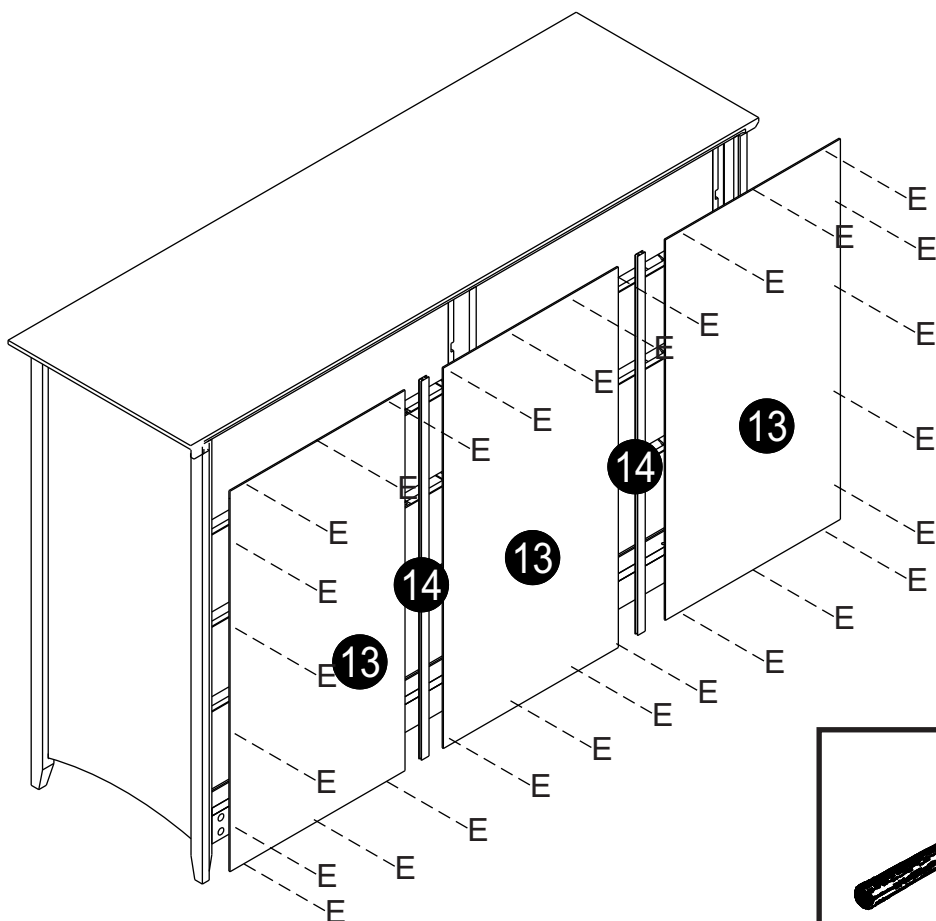


## STEP 1

# Tipping restraint Instructions


### TIPPING RESTRAINT HARDWARE

<b>A</b> 	<b>1</b>
• 1 nylon strap	
<b>B</b> 	<b>1</b>
• 1 1/2" screw	
<b>C</b> 	<b>1</b>
• 1 plastic screw anchor Ø6	
<b>D</b> 	<b>2</b>
• 2 wall brackets	
<b>E</b> 	<b>1</b>
• 1 small screw	

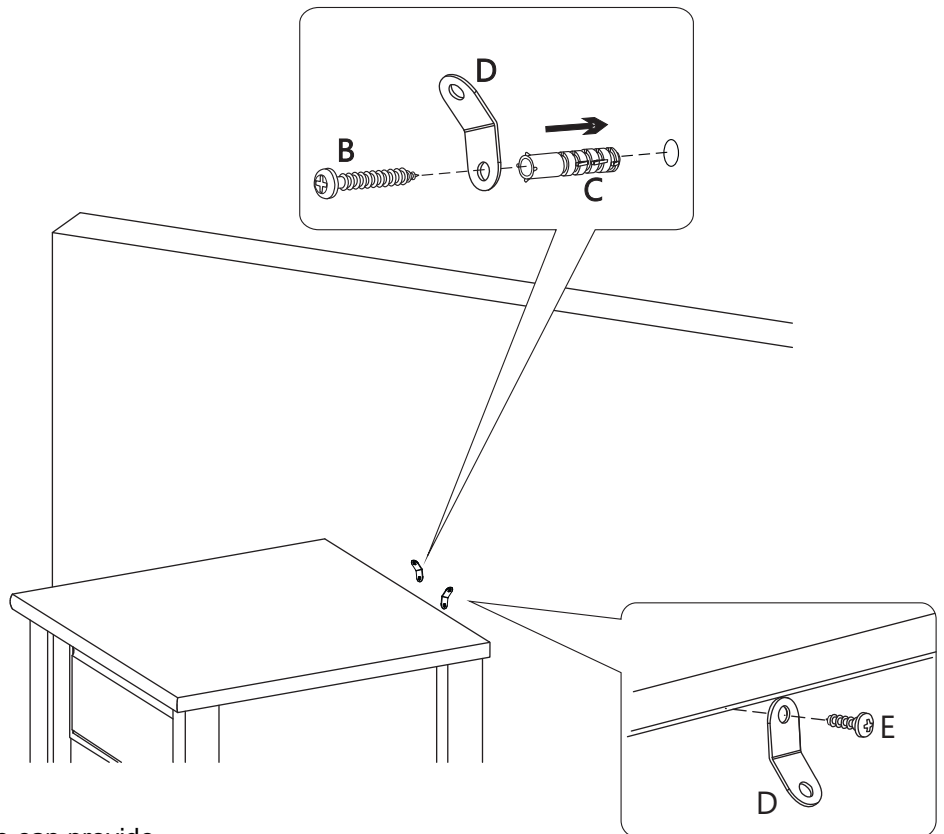

- When properly installed, this hardware can provide protection against the unexpected tipping of furniture.
- Attach one of the mounting brackets "D" securely to the back top edge of the unit using the short screw "E".
- Mark the location on the wall for mounting the second bracket "D".
- Drill the appropriate sized hole in the wall and insert the plastic screw anchor "C".
- Then secure the bracket to the wall using screw "B".
- Place the unit so the bracket on the back edge of unit is in line with the bracket on the wall.

## STEP 2

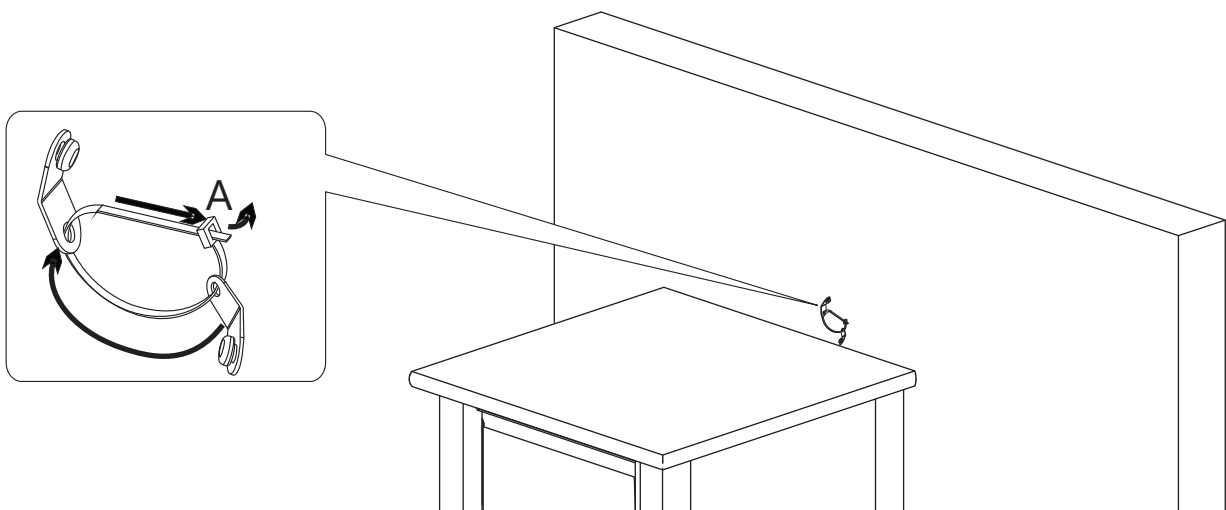

- Lace the end of the nylon restraint strap "A" through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot on the other end. Pull down on the beaded end until it snap-locks into the keyhole.
- Check to make sure the strap is securely laced and locked to the brackets.